

User Guide



Universal Charger & Accessory Kit For Eyewear Finder


Version 1.03-25

USER GUIDE

CONTENT

- 1. Guidelines to use Fasteners & Adhesive.....1
- 2. Eyewear Charging Guidelines.....5
- 3. Safety Guide.....9
- 4. Disposal.....9
- 5. Warranty Provision & Period.....9

1. GUIDELINES TO USE FASTENERS & ADHESIVE

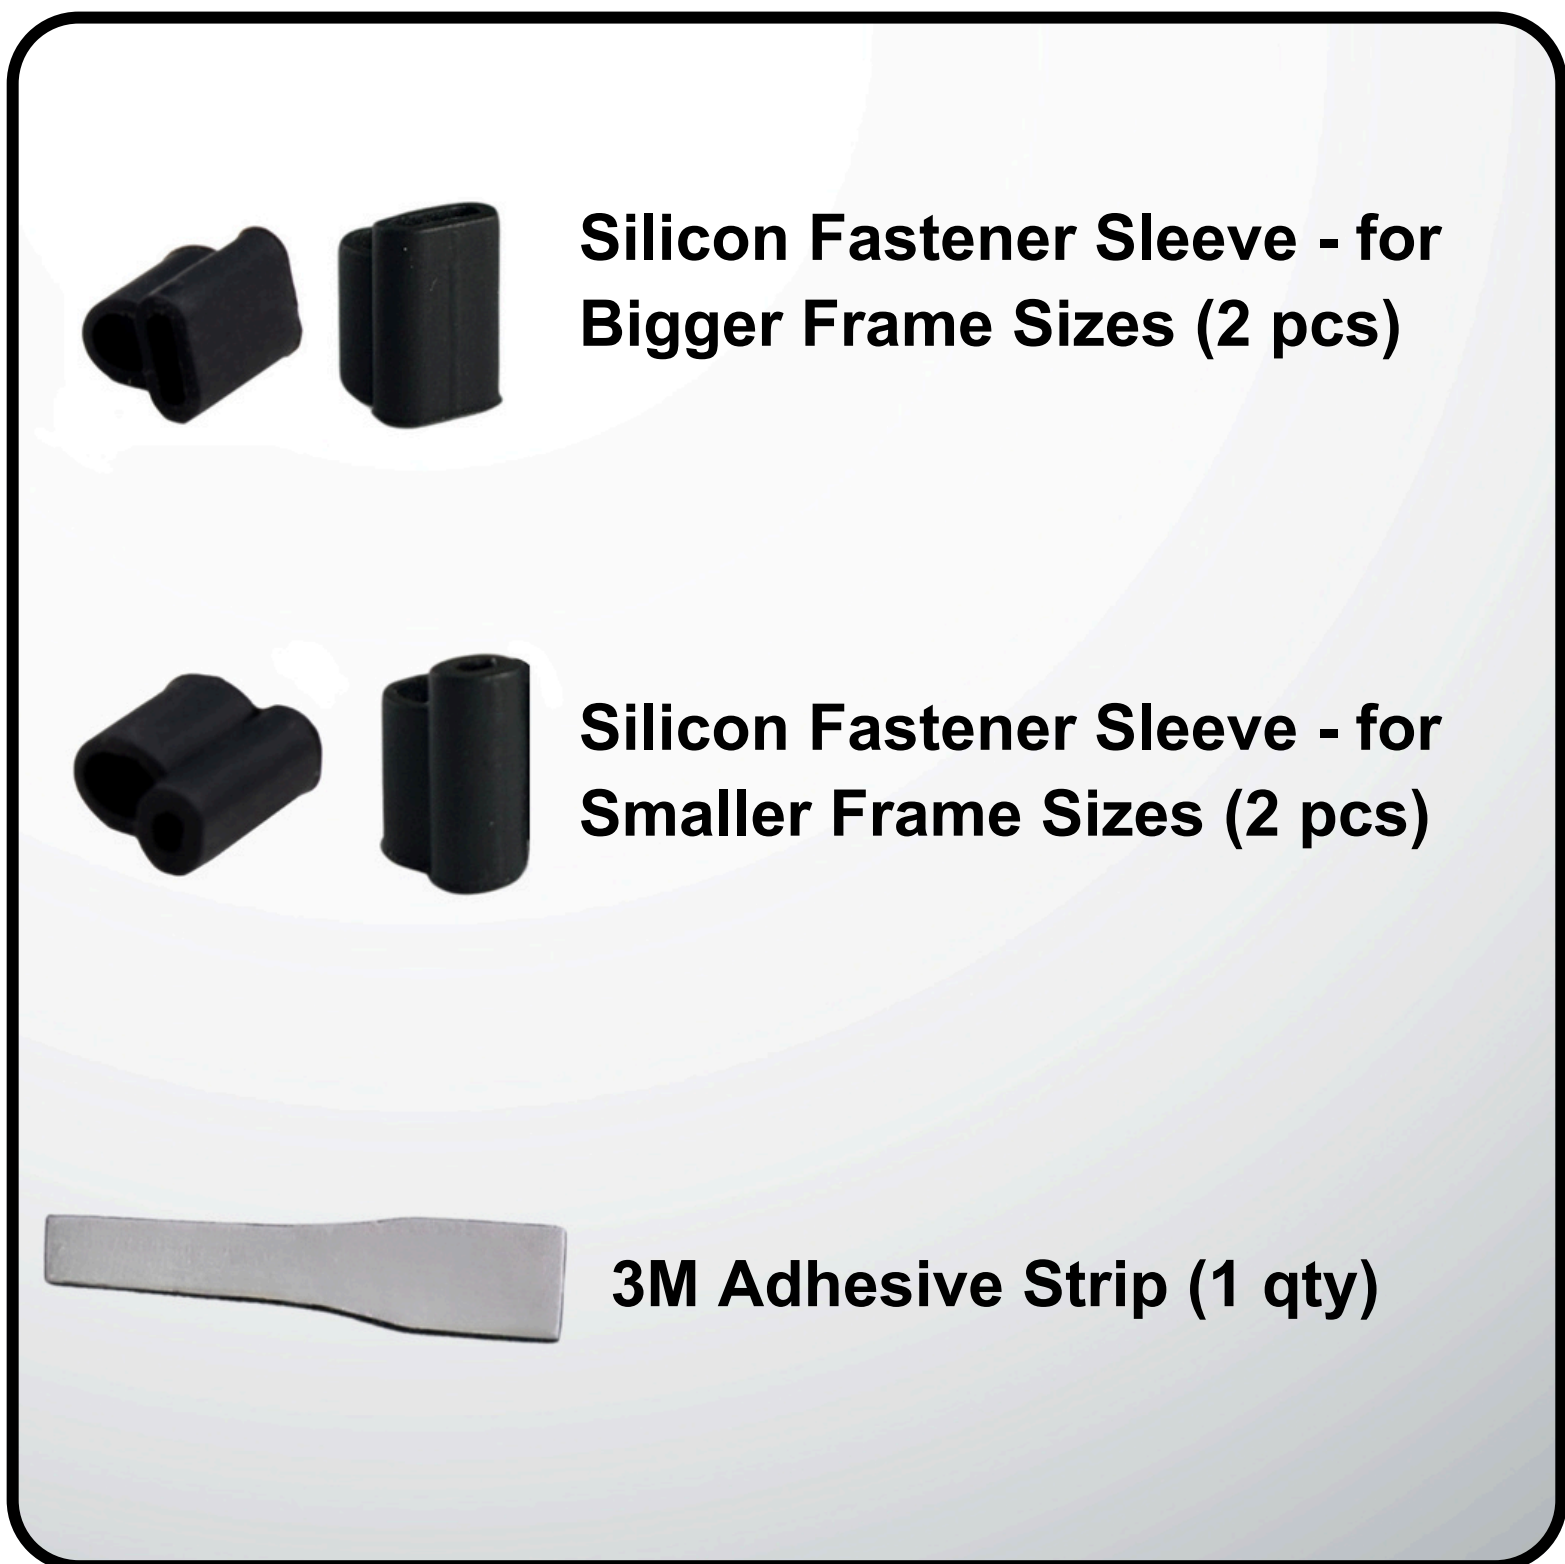

1. Attachment Option

Silicon fastener sleeve in 2 sizes provided to accommodate different temple thicknesses. Extra fasteners included for replacement or multi-eyewear use.

The 2-way Adhesive strip can be used to affix the Dolphin Eyewear Finder on the Eyewear temple/ leg.

1. GUIDELINES TO USE FASTENERS & ADHESIVE



2. Using Silicon Fastener (1/2)

Dolphin Eyewear Finder has a tapered end; slide it through round hole of the silicon fastener till it fits securely.

1. GUIDELINES TO USE FASTENERS & ADHESIVE



3. Using Silicon Fastener

Slide eyewear temple/ leg through the other hole. Choose fastener size based on temple thickness.

1. GUIDELINES TO USE FASTENERS & ADHESIVE



4. Placement Options

Position Dolphin Eyewear Finder based on eyewear ergonomics. Options include closer to the lens or closer to the temple tips towards the outer side.

2. EYEWEAR CHARGING GUIDELINES



1. Charging Instruction

Use provided clip charger. Attach Dolphin Eyewear Finder with the clip charger, ensuring secure alignment with two pins on charger and two contacts. Connect the USB end to the USB port

2. EYEWEAR CHARGING GUIDELINES



2. Indicator Light Check

Red light indicates charging. Ensure the red light continues to glow when put to charge

2. EYEWEAR CHARGING GUIDELINES



3. Charging Duration

Red light turns off when fully charged (May take 3 to 4 hours)

Charge overnight when not in use; no need to disassemble from eyewear

2. EYEWEAR CHARGING GUIDELINES



4. Long Battery Life

A full charge will typically last for 30 days without recharge.

4. SAFETY GUIDE

WARNING

Ingestion: Swallowing may lead to serious injury or death in as little as 2 hours due to chemical burns and potential perforation of the esophagus. Immediately see the doctor. Do not induce vomiting or give food or drink.

5. DISPOSAL

The packaging is made of eco-friendly, recyclable material. Please ask your local authorities about appropriate methods of disposal. Return the device to the designated collection facility.

6. WARRANTY

PROVISION & PERIOD

The device has been manufactured and thoroughly tested to meet strict quality standards. Consumer-inflicted damage, improper use or incorrect maintenance of the product will void the warranty. Should you experience a fault or manufacturing defect within 1 year of the date of purchase, we will repair or replace the product free of charge.

Your feedback matters!

Scan QR to let us know what you think



Amazon Review



For Inquiries or Assistance

contact us at support@tag8.co



Stay connected with tag8

Follow us for behind-the-scenes content and offers:



tag8_official



tag8.co
tag8.in



tag8.co
tag8.in



tag8



MAKE **FINDING** SMARTER™

